Low-Level Programming

Because we use the same spa pack on the lowest configuration spa as we do on the most loaded up spa, Low-Level Programming is how we tell the spa pack what features are installed.

	Access Low-Level Programming by pushing and holding the filter key (pump 5 on an Epic) until "LLP" shows up on the topside (about 10 seconds) then let go. Press the filter key to scroll forward through the menu, pump 3 to go backwards, and use the up/down arrows to change the value. The functionality is as follows:
2 ± 9 * Pn	Pn – Pump Number: Pn - 1 = 1 pump installed Pn - 2 = 2 pump installed Pn - 3 = 3 pump installed Pn - 5 = 5 pump installed
4 4 7 * BL 4 8 ^ * * *****	bL – Blowers: bL – 0 = No Blowers installed* bL – 1 = 1 Blower Installed (Superjet or Therapy Air) bL – 2 = 2 Blowers installed (both SJ and TA installed) * <i>If the number of pumps is set to 5, this will automatically be zero</i> <i>and cannot be changed.</i>
	O3 – Ozone: O3 – O = No ozone system installed O3 – 1 = Peak I system installed O3 – 2 = Peak II system installed
	On – Onzen On – $0 =$ No Onzen installed On – $1 =$ Onzen is installed
2 2 V % E5 2 8 A V 2 2 V 8 25 2 8 A V	FS – Filter Suspend FS – 0 = Filter will not suspend if the temperature is over the set-point FS – 1 = Filter will suspend if the temperature is more than 2oF above the set-point
	IP – Internet Protocol* IP-St = Set the spa's IP address to 169.254.3.3 IP-dy = Set the spa's IP address to be assigned dynamically by the router *Power must be cycled to the spa if this setting is changed

Low-Level Programming Continued



.XXX = Last octet of the spa's IP address*

*This is only displayed if the spa is assigned its IP dynamically or if the spa is logged into the home router



bS – Breaker Setting

bS - 16 = Power is managed assuming there is a 16 amp power supply to the spa bS - 20 = Power is managed assuming there is a 20 amp power supply to the spa bS - 25 = Power is managed assuming there is a 25 amp power supply to the spa bS - 32 = Power is managed assuming there is a 32 amp power supply to the spa bS - 40 = Power is managed assuming there is a 40 amp power supply to the spa bS - 50 = Power is managed assuming there is a 50 amp power supply to the spa bS - 60 = Power is managed assuming there is a 60 amp power supply to the spa



FL – Flash Lights

- FL 0 = Lights will not flash if there is an error
- FL 1 = Lights flash if there is an error



FG – Fogger

FG - 0 = No Fogger is installed - power is sent to the stereo relay for 2 hours when any button is pressed (for all 2013 and older spas)

FG - 1 = Fogger is installed - power is sent to the "fogger" relay when the light key is pressed for 2 seconds.